


# EXPORTING DATA FROM PRECISION PLANTING GEN 2 20|20 DISPLAY


## Step 1:

- A) Insert USB drive into the 20/20 monitor
- B) On the right side of the screen, select the *Setup* button

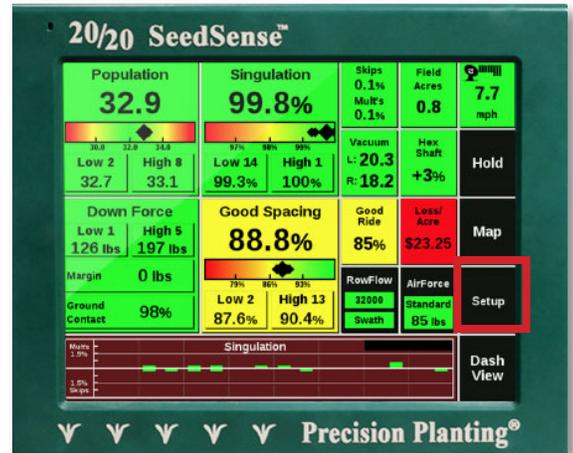

## Step 2:

- A) Select *Data* tab on right side of screen
- B) Click the Export button
- C) Select either *New Field Map Data* to export data from the current planting season or *Old Field Map Data* to export data for previous seasons

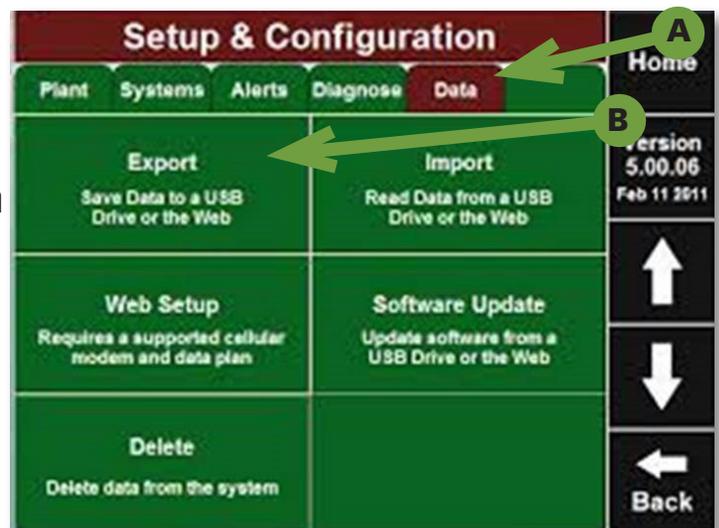

## Best Practice Suggestion:

Export planting configuration to keep on a USB drive and export planting data after each season.



**Questions?** 800.260.8366 • [www.truacre.com](http://www.truacre.com) • CRS System Support 877.551.0410